

Cheat Sheet for Flex Control Board:

KEYPAD

To program the vendor, use the buttons on the keypad to navigate as directed in the instructions below.

Buttons 2, 8, 4, 6, # and * are used to move between the various modes, menus and sub-menus; 2=Move Up; 8=Move Down, 4=Move Left; 6=Move Right; #=Enter; *=Go Back/Escape
See Figure 2.


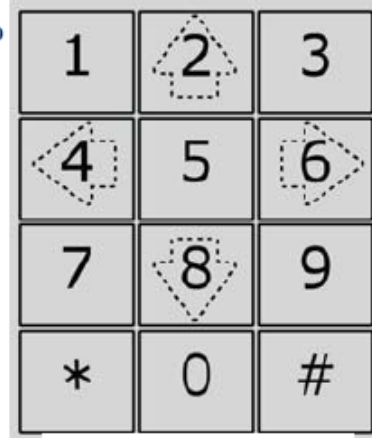


Figure 2 - Keypad

SERVICE MODE MENU

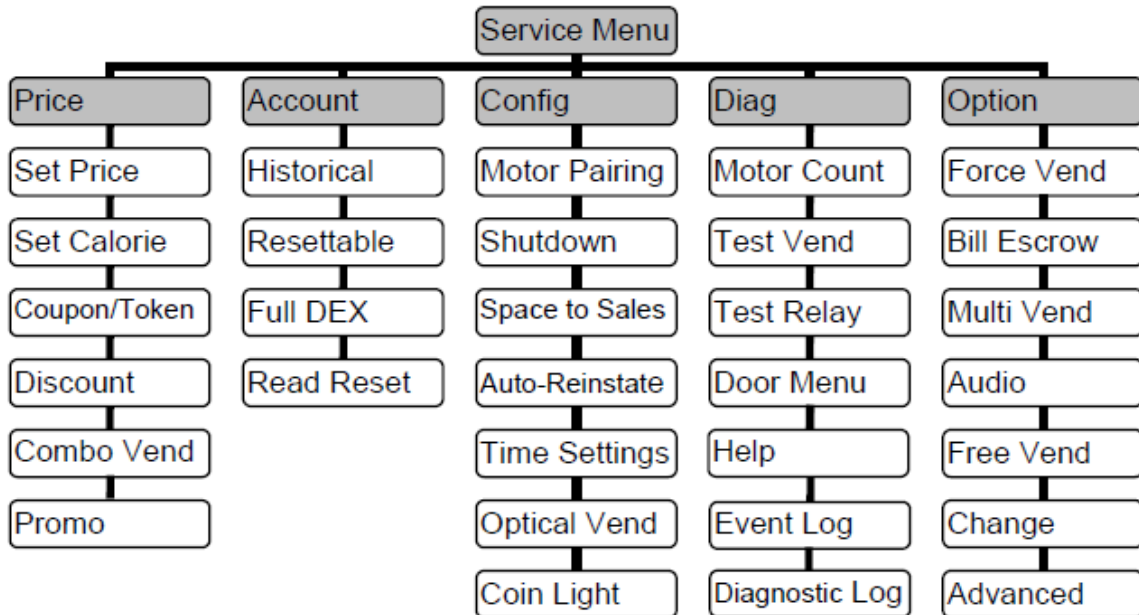

Important Note: The Evoke controller does not utilize a **TUBE FILL MODE**; the controller uses the tube amounts that are reported by the coin changer.

Contact us:

Website: <https://idsvending.com/> E-mail: support@iqtechportal.com Phone: 515-271-8510